


LED ADVISOR

GLOCK 17 / 22 / 31
Gen.4 & Gen.5



PACKAGE CONTENTS

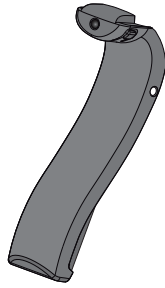

Follower x2



LEDADVISOR x1

TOOLS

*not included




CR 1632
Battery x1

ASSEMBLY

WARNING


Always make sure your firearm is unloaded, no rounds in the chamber and pointed in a safe direction before you disassemble and work on it.

Insert the battery *Be careful with the opening angle.*

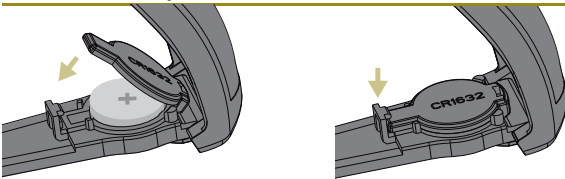


If after installing the battery the LED light is blinking red, you should start the process again.

Insert the battery module in the frame, and set the backstrap in place

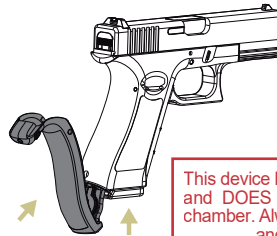

Fix the **LEDADVISOR** backstrap with the pin*

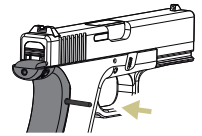


Pin not included, use original pin.

WARNING


This device **DOES NOT** count rounds in the chamber and **DOES NOT** show if there is a round in the chamber. Always make sure your firearm is unloaded and with no round in the chamber.

FOLLOWER INSTALLATION *Use only GLOCK original magazines.*


Disassemble the magazine**

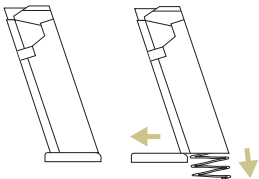


Remove the original follower

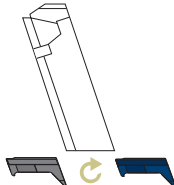

Replace it with the **LEDADVISOR** follower

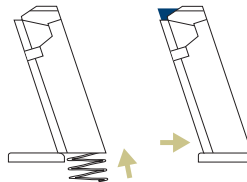

The system is ready to use

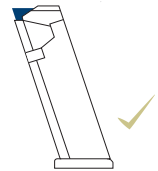

OPERATION · LED ACTIVATION EVENTS



SHOOTING

NO LIGHT 4 rounds or more
RED LIGHT 3 rounds or less***

PRESSING THE CHECK BUTTON

GREEN LIGHT 4 rounds or more
RED LIGHT 3 rounds or less
BLUE LIGHT Low battery
PURPLE LIGHT No mag

Other events · BLIND MODE

• In blind mode, remaining magazine round information is only accessible by pressing either of the buttons and is not visible during shooting.

BLINKING AMBER LIGHT Enter "blind" mode
AMBER LIGHT Back to "normal" mode

- The device enters "blind" mode by pressing either button for 3 or more seconds.
- The device goes back to the "Normal" mode by pressing either button for 3 or more seconds.