


LED ADVISOR

S&W MP9
S&W MP40



PACKAGE CONTENTS

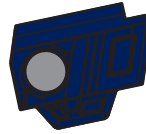

Follower x2



LED ADVISOR x1

TOOLS

*not included



CR 1632
Battery x1


ASSEMBLY · GUN

Disassemble the original backstrap




WARNING
Always make sure your firearm is unloaded, no rounds in the chamber and pointed in a safe direction before you disassemble and work on it.

Assemble the battery (Left Side)

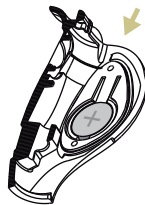

Assemble LED ADVISOR backstrap

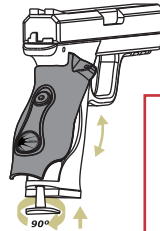

WARNING
This device DOES NOT count rounds in the chamber and DOES NOT show if there is a round in the chamber. Always make sure your firearm is unloaded and with no round in the chamber.




DISASSEMBLY · BATTERY


Disassemble the battery

ASSEMBLY · MAGAZINE *Use only S&W original magazines.*


Disassemble the magazine

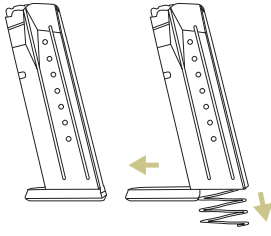


Remove the original follower

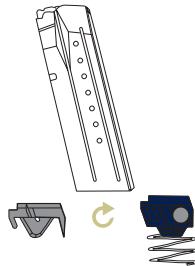

Replace it with the LED ADVISOR follower

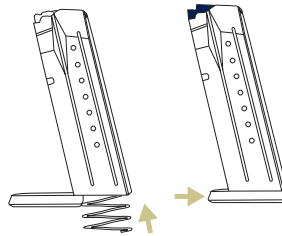

The system is ready to use

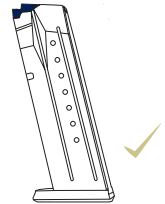


KNOW YOUR LED ADVISOR

LED INDICATOR


AUTOMATIC LIGHT SENSOR

CHECK BUTTON

BACKSTRAP

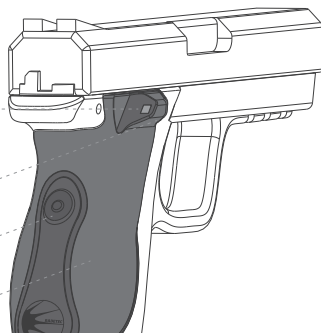

LED ACTIVATION EVENTS

 

Firing the gun or pressing the check button.

MONO-COLOUR 100-032/033

TRI-COLOUR 100-028/029

4+ rd. No Light

4+ rd. No Light

3 rd. Blinking Red (Slow)

3 rd. Continuous Blue

2 rd. Blinking Red (Medium)

2 rd. Continuous Green

1 rd. Blinking Red (Fast)

1 rd. Continuous Red

0 rd. Continuous Red**

0 rd. Blinking Red**

LED Intensity is automatically adjusted depending on ambient light.